


Loose Tube Cutter LTC-01




The loose tube cutter (LTC-01) is the special tool for removing the loose tube without damage to the UV coated optical fiber inside the loose tube.

LTC-01 is applicable to the loose tube that shall be shown in the table below, in combination with guide slit and cushion.

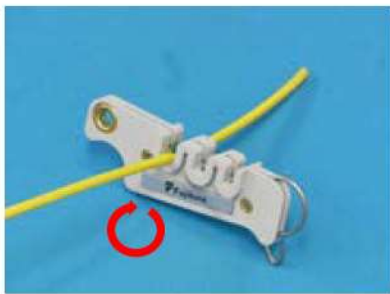

Close the clamp lever, and notch the loose tube surface with blade by revolving the loose tube cutter (LTC-01).

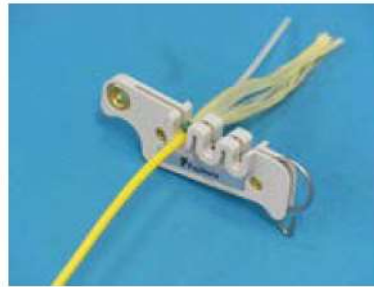

Break the loose tube at notching point and pull out the broken loose tube.



Outer diameter of loose tube	Inner diameter of loose tube
0.9mm	0.6mm
1.0mm	0.6mm
1.6mm	0.8mm
2.4mm	1.4mm
3.0mm	2.0mm