


# FTB-5500B/FTB-5800

## PMD AND CD ANALYZERS

- Delivers fast and reliable performance in a field-ready unit for all chromatic and polarization dispersion testing needs, from verifying the capacity of legacy fiber to upgrading a network to a given rate.

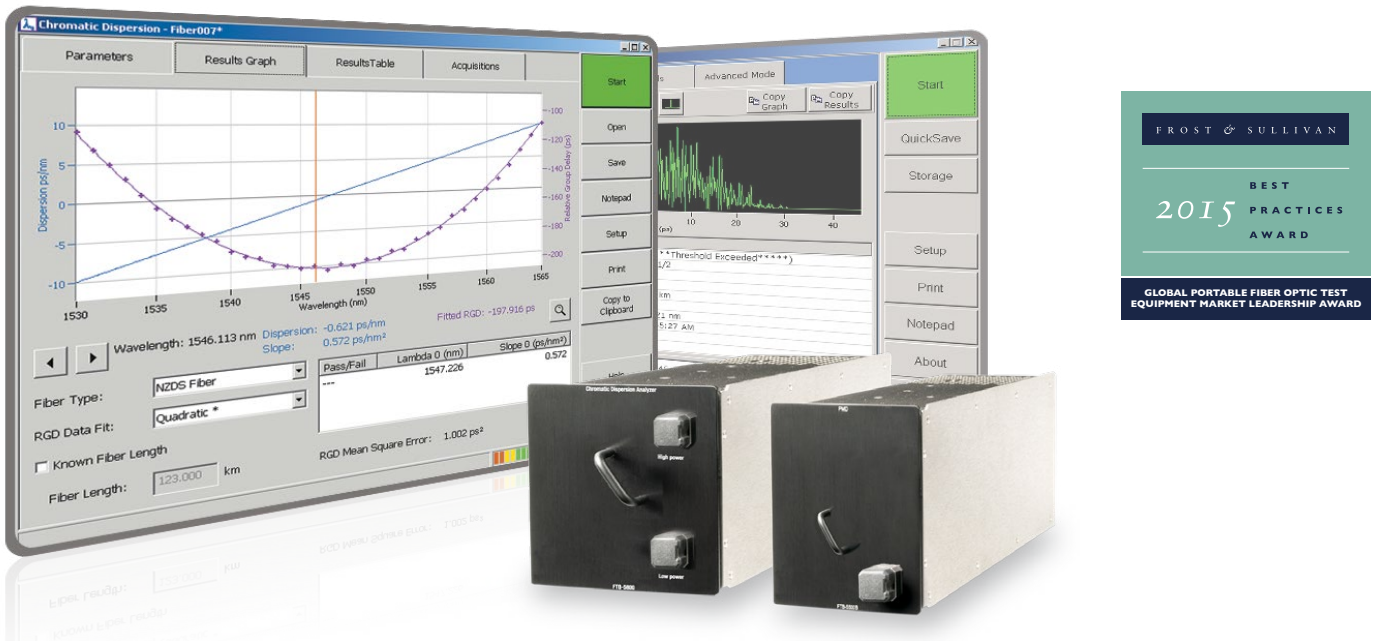

### KEY FEATURES

#### Polarization mode dispersion (PMD) analyzer— FTB-5500B

Less than five-second testing time for any PMD range

No autocorrelation peak, for enhanced accuracy

NIST traceable

Compliant with TIA-FOTP-124A standard

Patented design: Test through EDFAs

100 Gbit/s-ready

Based on the General Interferometric Technique (GINTY)

#### Chromatic dispersion (CD) analyzer— FTB-5800

Complete CD characterization

Highly accurate phase-shift method

No communication between source and receiver

Compliant with IEC 60793-1-42 and TIA-FOTP-169 standards

Patented design: Test through EDFAs

100 Gbit/s-ready

### PLATFORM COMPATIBILITY




Platform  
FTB-4 Pro



Platform  
FTB-500

## PMD TESTING STILL CRITICAL IN COHERENT 40G/100G/200G NETWORKS

One of the promises of coherent systems is that they can handle very high levels of PMD, but is that really the case? Each wavelength has a different instantaneous PMD (referred to as differential group delay or DGD) that is uncorrelated with the next wavelength and changes over time. The average of all these DGDs at individual wavelengths is what we call PMD. Coherent systems feature digital signal processing (DSP) technology that tracks and compensates in real-time for the variations in DGD on a per-wavelength basis. However, DSPs can compensate for a limited range of DGD, and they have a limited reaction time to changes in DGD. Since DGD changes over time, very high DGD values can occur, and may therefore exceed the compensation range of the DSP. Similarly, DGD sometimes changes very rapidly, and even faster than the DSP is able to track, leading to loss of PMD compensation. It can also be sudden changes in state of polarization that lead to a complete loss of signal. When that happens, the DSP tries to resynchronize and rediscover the level of PMD that needs to be compensated for. While it usually does this very quickly, many bits will have gone by uncompensated for, potentially generating a lot of errors in the process.

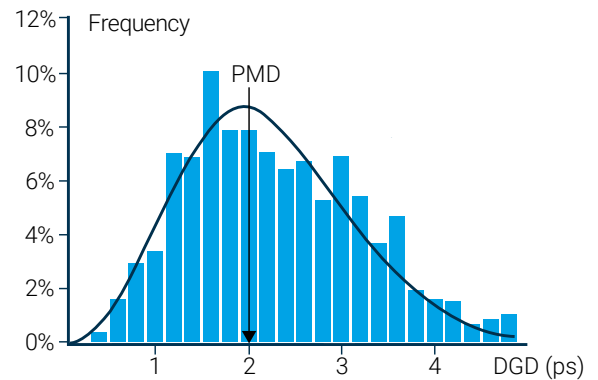

*Even with low PMD, high DGD values can occur and lead to PMD compensation failure*

There are more chances of exceeding PMD tolerance range if the PMD of the fiber is high. As such, it is imperative to test PMD of coherent systems with an instrument like the FTB-5500B to avoid network failures. In particular, aerial sections, bridge sections, in addition to the sections following these areas, are sections very prone to exhibit high PMD.


In addition, PMD testing is also required in coherent systems because system vendors often ask service providers to supply the fiber PMD value before deploying a new coherent network.

## CD TESTING IN COHERENT 40G/100G/200G NETWORKS

Although coherent systems feature CD compensation, CD testing is still needed in coherent systems for two main reasons:

- Because system vendors use CD values in their network design tools
- To reduce nonlinear effects

Nonlinear effects are a family of optical phenomena common in coherent networks that can be potentially harmful to the system performance. Indeed, nonlinear effects can add so-called nonlinear noise to the system, which might result in increased BER. A common way to reduce the impact of some nonlinear effects, in particular cross-phase modulation and self-phase modulation, is to ensure that the CD is non-zero in the DWDM spectral range, because the greater the CD, the lower the nonlinear effects. Accordingly, CD testing in coherent systems, with a device like the FTB-5800, is useful to make sure that coherent channels propagate at wavelengths where the CD is not too close to zero.

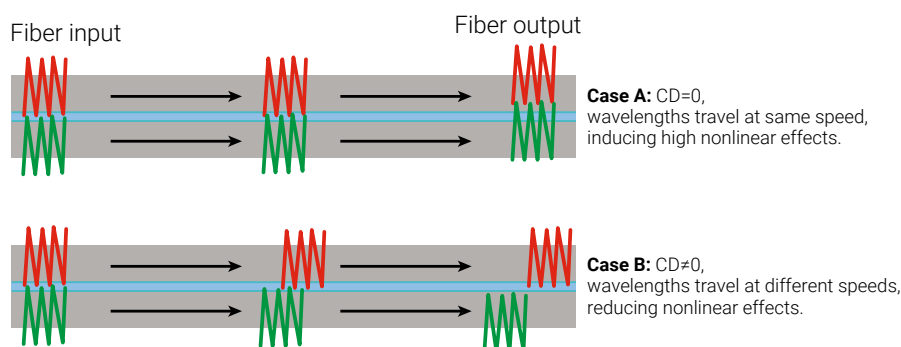

## COMBINING CD AND PMD FOR PRECISE LINK CHARACTERIZATION

Designed for ultra-longhaul and 40/100 Gbit/s (and higher) applications, EXFO's FTB-5500B PMD and FTB-5800 CD analyzer combo provides you with the speed, accuracy and high performance you need to ensure high-quality network services. Housed in the expert FTB-500 platform, the FTB-5500B and FTB-5800 test modules survive splashes, knocks and drops—ideal for CO and field conditions.



EXFO's CD and PMD analyzers housed in the FTB-500 platform



FTB-5500B PMD Analyzer



FTB-5800 CD Analyzer

### MEASURING PMD THE FAST WAY

PMD represents a significant danger to both legacy and newly deployed networks because high PMD can induce bit error rate (BER). EXFO's FTB-5500B PMD analyzer helps you get ahead in the field. Whether you need to verify the capacity of legacy fiber or upgrade a network to any speed, the modular FTB-5500B is fast, reliable and ready to go.

KEY FEATURES	KEY BENEFITS
Five-second testing time	> Test more fiber, faster
No autocorrelation peak	> High accuracy
Testing through EDFAs	> Reduce test cost
Suitable for all networks	> Future-proof: 100 Gbit/s-ready, designed for longhaul and ultra-longhaul networks

### CHARACTERIZING CD IN THE FIELD

CD causes pulse broadening and can have a very negative impact on transmission performance by increasing the BER. EXFO's FTB-5800 CD analyzer offers high performance in a field-ready unit for all CD testing situations.

KEY FEATURES	KEY BENEFITS
Personalized data management	> Generate clear, customized reports
Phase-shift method	> High accuracy
Testing through EDFAs	> Reduce test cost
Suitable for all networks	> Future-proof: 100 Gbit/s-ready, designed for longhaul, ultra-longhaul and WDM networks

### SECOND-ORDER PMD

Particularly important in multichannel transmission, especially as rates climb to 40/100 Gbit/s and higher, second-order PMD is derived from the measured PMD value. EXFO's software provides second-order PMD delay and coefficient values for telecom fibers. These values allow you to characterize fibers and cables more precisely than simple PMD, and to better control the transmission quality of high-speed systems.




## ADDITIONAL PMD AND CD COMBO ADVANTAGES

### The ultra-longhaul advantage

It's possible to test whole links as opposed to just sections, resulting in reduced manipulation, error and testing time. Because filtering is done at the receiver end and not at the source, transmission through one-way devices such as isolators and EDFAs is possible. Tests have been performed through as many as 250 cascaded amplifiers over a link length of more than 12 000 km.

### The FLS-5800 CD/PMD analyzer source advantage

A single light source, the FLS-5800 CD/PMD Analyzer Source, can help you characterize CD and PMD—reducing testing time and minimizing the potential for human error.

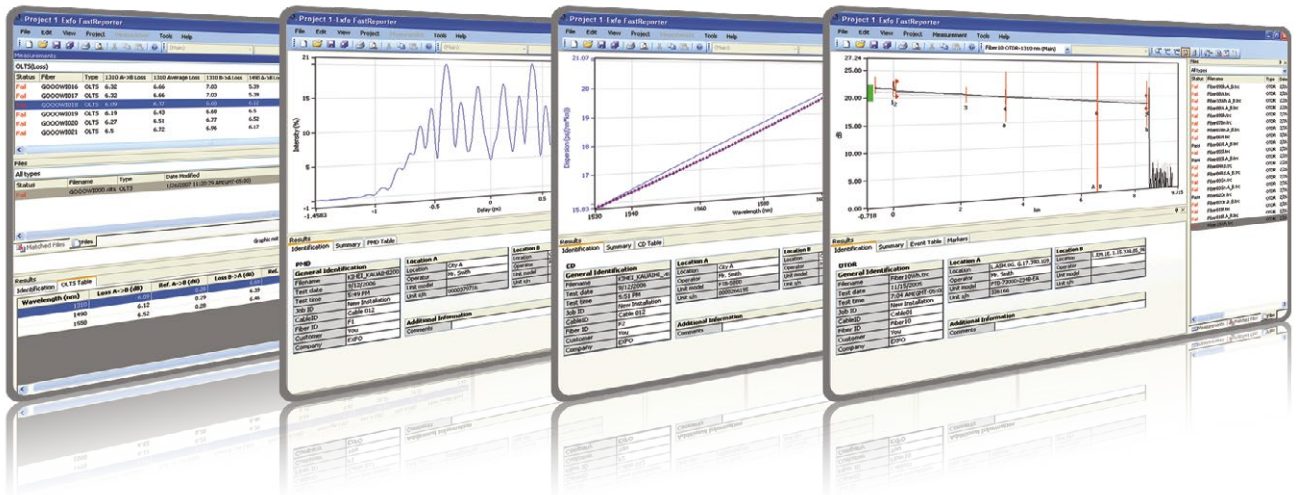

### Fast-track data post-processing with FastReporter software

The optional FastReporter software package provides you with the post-processing tools and functionalities you need to optimize your test cycles, whatever the application. Designed for off-line analysis of field-acquired data, FastReporter offers a truly intuitive graphical user interface, which contributes to boost productivity.

### Flexible reporting

Choose from various report templates, including PMD, CD and fiber characterization. Generate comprehensive cable reports in PDF, Excel or HTML format.

## FTB-5500B PMD ANALYZER

### TECHNICAL SPECIFICATIONS

Wavelength range (nm)	1260 to 1675 (O to U band)
Measurement range (ps)	0 to 115
Sensitivity <sup>a</sup> (dBm)	-45
Measuring time (s)	4.5 (for any PMD value)
Absolute uncertainty (strong mode coupling) <sup>b</sup> (ps)	± (0.020 + 2 % of PMD)
Allows measurement through EDFA	Yes (above 120 EDFAs)

### GENERAL SPECIFICATIONS

Size (H x W x D)	96 mm x 76 mm x 260 mm (3 ¾ in x 3 in x 10 ¼ in)
Weight	1.5 kg (3.4 lb)
Temperature	Operating Storage
	0 °C to 40 °C (32 °F to 104 °F) -40 °C to 70 °C (-40 °F to 158 °F)
Relative humidity	0 % to 93 % non-condensing

a. Typical, for C band. May be increased with averaging. With the FLS-5800, the typical dynamic range is 47 dB.

b. For C band, assuming averaging over all states of polarization.

## FTB-5800 CD ANALYZER

### TECHNICAL SPECIFICATIONS<sup>a</sup>

Wavelength range (nm)	1530 to 1625 1200 to 1700 <sup>b</sup>		
Wavelength step (nm)	Minimum 0.1		
Measurement points	Maximum 950, user-definable		
Dynamic range <sup>c</sup> (dB)	42		
Wavelength uncertainty <sup>d</sup> (accuracy) (nm)	0.1		
Dispersion uncertainty <sup>d</sup> (accuracy) (ps/nm)			
	20 km of G.652 1.6		
	120 km of G.652 3.1		
	20 km of G.655 1.9 (guaranteed)		
	<b>20 km</b>	<b>80 km</b>	<b>120 km</b>
Dispersion repeatability <sup>d</sup> (ps/nm)	0.04	0.2	1.1
Zero-dispersion wavelength $\lambda_0$ repeatability <sup>d</sup> (nm)	0.1	0.14	0.8
Dispersion slope repeatability $\lambda_0$ <sup>d</sup> (%)	0.03	0.05	0.25
Minimum fiber length (km)	< 1		
Maximum fiber length <sup>e</sup> (km)	> 5400		
Measurement time per point <sup>e</sup> (s)	Minimum < 1		

### GENERAL SPECIFICATIONS

Size (H x W x D)	96 mm x 100 mm x 260 mm (3 ¾ in x 4 in x 10 ¼ in)
Weight	2 kg (4.5 lb)
Temperature	Operating Storage
	0 °C to 40 °C (32 °F to 104 °F) -20 °C to 50 °C (-4 °F to 122 °F)
Relative humidity	0 % to 90 % non-condensing

a. All specifications are typical with four seconds averaging time per point (where applicable), at a temperature of 23 °C ± 1 °C, with FC connectors and after warmup time.

b. Displayed range. Values may be extrapolated.

c. Dynamic range is defined as the difference between the strongest signal and the weakest detectable by the receiver. Extra averaging may be required. Uncertainty (accuracy) is not guaranteed at the limits of range.

d. C+L band.

e. Including EDFAs.

f. Additional gain setting time may be required prior to the first point of each band.



## ORDERING INFORMATION

## PMD analyzer

## FTB-5500B-XX

## Connector ■

EI-EUI-28 = UPC/DIN 47256  
 EI-EUI-76 = UPC/HMS-10/AG  
 EI-EUI-89 = UPC/FC narrow key  
 EI-EUI-90 = UPC/ST  
 EI-EUI-91 = UPC/SC  
 EI-EUI-95 = UPC/E-2000  
 EA-EUI-28 = APC/DIN 47256  
 EA-EUI-89 = APC/FC narrow key  
 EA-EUI-91 = APC/SC  
 EA-EUI-95 = APC/E-2000

Example: FTB-5500B-EI-EUI-89

## CD analyzer

## FTB-5800-XX

## Connector ■

EI-EUI-28 = UPC/DIN 47256  
 EI-EUI-76 = UPC/HMS-10/AG  
 EI-EUI-89 = UPC/FC narrow key  
 EI-EUI-90 = UPC/ST  
 EI-EUI-91 = UPC/SC  
 EI-EUI-95 = UPC/E-2000  
 EA-EUI-28 = APC/DIN 47256  
 EA-EUI-89 = APC/FC narrow key  
 EA-EUI-91 = APC/SC  
 EA-EUI-95 = APC/E-2000

Example: FTB-5800-EI-EUI-89

## CD/PMD analyzer source

## FLS-5834B-XX

## Model ■

FLS-5834B = 1550 nm and 1625 nm

## Connector ■

EI-EUI-28 = UPC/DIN 47256  
 EI-EUI-76 = UPC/HMS-10/AG (EI only)  
 EI-EUI-89 = UPC/FC narrow key  
 EI-EUI-90 = UPC/ST (EI only)  
 EI-EUI-91 = UPC/SC  
 EI-EUI-95 = UPC/E-2000  
 EA-EUI-28 = APC/DIN 47256  
 EA-EUI-89 = APC/FC narrow key  
 EA-EUI-91 = APC/SC  
 EA-EUI-95 = APC/E-2000

Example: FLS-5834B-EI-EUI-89

## Polarized light source (PMD testing only)

## FLS-110-XXP-XX

## Model ■

02P = 1310 nm LED  
 03P = 1550 nm LED

## Connector ■

58 = FC/APC narrow key  
 89 = FC/UPC narrow key  
 91 = SC/UPC  
 EI-EUI-28 = UPC/DIN 47256  
 EI-EUI-76 = UPC/HMS-10/A  
 EI-EUI-89 = UPC/FC narrow key  
 EI-EUI-90 = UPC/ST  
 EI-EUI-91 = UPC/SC  
 EI-EUI-95 = UPC/E-2000  
 EA-EUI-28 = APC/DIN 47256  
 EA-EUI-89 = APC/FC narrow key  
 EA-EUI-91 = APC/SC  
 EA-EUI-95 = APC/E-2000

Example: FLS-110-02P-EI-EUI-89

## LASER SAFETY

FLS-110  
 FLS-5834B



**EXFO headquarters** T +1 418 683-0211 **Toll-free** +1 800 663-3936 (USA and Canada)

EXFO serves over 2000 customers in more than 100 countries. To find your local office contact details, please go to [www.EXFO.com/contact](http://www.EXFO.com/contact).

For the most recent patent marking information, please visit [www.EXFO.com/patent](http://www.EXFO.com/patent). EXFO is certified ISO 9001 and attests to the quality of these products. EXFO has made every effort to ensure that the information contained in this specification sheet is accurate. However, we accept no responsibility for any errors or omissions, and we reserve the right to modify design, characteristics and products at any time without obligation. Units of measurement in this document conform to SI standards and practices. In addition, all of EXFO's manufactured products are compliant with the European Union's WEEE directive. For more information, please visit [www.EXFO.com/recycle](http://www.EXFO.com/recycle). **Contact EXFO for prices and availability or to obtain the phone number of your local EXFO distributor.**

For the most recent version of this spec sheet, please go to [www.EXFO.com/specs](http://www.EXFO.com/specs).

In case of discrepancy, the web version takes precedence over any printed literature.